



Drive Gear

This view is with the arm all the way forward looking from the right side front. Move the X axis head until the screw is visible. Make sure that the gear has not moved up or down. It should not be rubbing on anything.